



Accessoires
Accessories
Zubehör
Accessorio



globe trotter

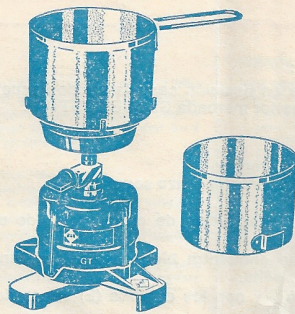

Stabilisateur
Stabilising unit
Gerätehalter
Stabilizzatore

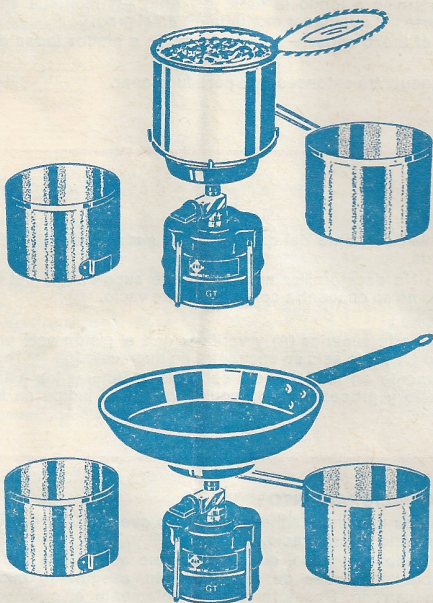

Pour toute
réclamation
joindre ce coupon

0 982 066

globe trotter

Pour tout renseignement, adressez-vous au service :
For further information write to the customer relations Department :
"Information du consommateur" Camping Gaz® International
16, avenue Ledru-Rollin, 75012 Paris - Tél. : 343.04.09

F Français

I Italiano

N Norsk

GB English

NL Nederlands

SF Suomeksi

D Deutsch

S Svenska

DK Dansk

E Español

camping gaz international

camping gaz international

Instructions for use



IMPORTANT :

The GLOBE TROTTER stove is designed to operate only from Camping Gaz International blue "GT" butane cartridges. No other type of cartridge should be used and "APPLICATION DES GAZ", and its subsidiary companies, can accept no responsibility for incidents resulting from the use of cartridges made by other manufacturers.

ASSEMBLING YOUR GLOBE TROTTER

1. Remove the strap keeping the two pans in the closed position. Take out the upper pan marked GLOBE TROTTER.
2. Inside you will find :
 - a blue metal cartridge holder
 - a tap unit with control knob
 - a burner with windshield and pan support arms
 - a removable pan handle
3. Make sure the tap unit (R) is closed by turning the control knob (B) fully to the right.
4. Turn the cartridge holder (C) over, and open out the cartridge retaining clips (E). Place the "GT" cartridge in the cartridge holder. Push the cartridge firmly into the cartridge holder and snap the retaining clips (E) into position over the base of the cartridge.

WARNING :

Never insert a cartridge in the holder while the assembly (A) is in position. The tap and burner assembly (A) must always be unscrewed and removed prior to loading.

5. Place the cartridge holder in an upright position and screw in the tap unit (G). Then screw the burner (F) into the tap unit.
 6. Open out the pan support arms (D) on either side of the burner (S).
- Your GLOBE TROTTER is now ready for use.

OPERATING YOUR GLOBE TROTTER

Lighting the appliance :

Apply a flame to the burner (S) while turning the control knob (B) to the left. **IMPORTANT :** Never unscrew the tap and burner assembly (A) until the cartridge is completely empty.

Changing the cartridge :

When the cartridge is completely empty unscrew the upper section (A) and check that the rubber washer (J) is still firmly in position and in good condition.

Gently push the base of the cartridge and remove the retaining clips. Take out the empty cartridge, and insert a full one following the procedure set out in paragraphs 3, 4 and 5 above.

USEFUL HINTS :

If the appliance fails to light, shake it. If you hear no liquid, the cartridge is empty and should be replaced.

If you hear liquid inside, the nozzle is blocked. To clear it, first check that the tap is fully closed. Then completely unscrew the BURNER ASSEMBLY ONLY (F) and use a CAMPING GAZ INTERNATIONAL pricker to clear the nozzle. NEVER use any other device. CAMPING GAZ prickers are available from all authorized dealers.

Do not leave the pan handle in place while the pan is being heated up.

PACKING THE STOVE :

To stow away the stove inside the pans, proceed in one of these two ways :

1. Appliance out of use (empty cartridge removed) : pan dimensions 9 cm height (3½ in.) 11 cm in diameter (4½ in.).

When the three units have been separated place them in the lower pan in the following order (see drawing) :

- pan handle
 - burner assembly (F) (tube pointing upwards)
 - tap unit (G) next to the burner tube
 - cartridge holder (H) over the tap and burner, retaining clips pointing upwards.
- Enclose with the second pan, and then replace the strap.

Note : It is possible in this instance to stow a new "GT" cartridge between the cartridge holder retaining clips.

2. Appliance still in use (Partly filled cartridge still in position), pan dimensions 148 mm high (5¾ in.) 11 cm. in diameter (4½ in.).

The appliance remains completely assembled with its cartridge :

- fold back the supporting arms
- put the appliance just as it is inside the lower pan
- place the handle on the burner
- enclose with the second pan, replacing the strap.

Weight of appliance without cartridge : 450 grams (16 oz).

